



## Operation Method

1. Insert the SIM card into the device card slot before powering on, and then insert the device into the power supply socket.
2. Waiting for the device to search the network signal. When the green light is on, the red light flashes for 3 seconds per time, indicating that the network signal has been connected (this process takes about 15 seconds).
3. Keeping press the reset button, release the button after hearing the "beep" of the buzzer, The buzzer "beep" 4 times indicate device initialization successfully completed.
4. For the first time to use, it needs to be bound to the user's mobile phone. Send SMS command #00# to the SIM card number of the product. Wait for the GSM socket to receive the command and reply message to the master number: "Congratulations! The socket was enabled; The phone number was setted /Please calibrate the time"

## FAQ and Solutions

Question	Solutions
The phone number binding failed	<ol style="list-style-type: none"><li>1.Please check if the SIM card is supporting GSM network and 2G signal.</li><li>2.Please check if the SIM card is activated.</li><li>3.Please check whether the SIM card is installed in the correct direction.</li></ol>
The device not working properly	<ol style="list-style-type: none"><li>1.Please check if the device is powered on normally.</li><li>2.Please confirm that the device is properly bound to the phone number.</li></ol>
The timing is not accurate	<ol style="list-style-type: none"><li>1.Please confirm whether the product has been calibrated the time as required.</li><li>2.Sending command #07# to check whether the current time is correct.</li><li>3.Please check if the timing in the time period, or open the timing.</li></ol>
The temperature control function is invalid	<ol style="list-style-type: none"><li>1.Please confirm that the temperature control is open or not, or send command #159# to query the status.</li><li>2.Please check if the temperature sensor is inserted well.</li></ol>
The temperature alarm function is invalid	<ol style="list-style-type: none"><li>1.Please check if the temperature sensor is inserted well.</li><li>2.Please confirm that the temperature alarm function is turned on or send command #170# to query the status.</li></ol>
No temperature value	Please check if the temperature sensor is inserted well.