


Retractable autoreel (010844 & 054954)
Instructions for tape replacement



1. Open the outer housing of the reel by removing the 4 screws at each side (8 screws in total)




2+3. Take the transparent inner reel out of the outside housing, the tension on the spring will be lost, this is normal.

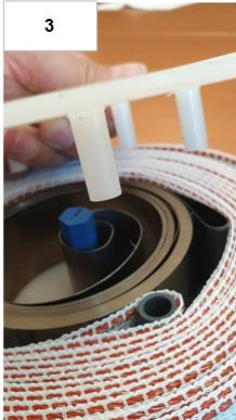


2+3. Remove one (1) part of the transparent reel by removing all 6 screws (3 at each side of the reel).




4. Keep the (metal) spring in place and remove the old tape from the reel. Prepare the new tape (max. 15mtr/40mm) by pre-assembling the gate handle and rubber sleeve at the start of the tape.

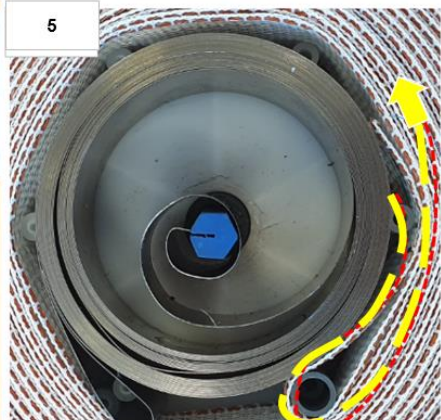


5. Create a loop at the end of the new tape and install it as shown in the picture above.

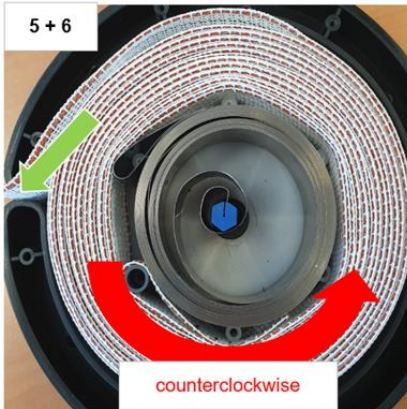

6. Wind up / re-spool the new tape counter clockwise on the reel.

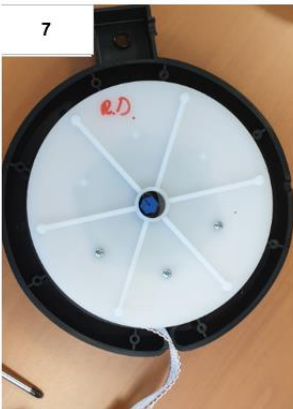

7. Reassemble both parts of the transparent reel by fastening the 6 screws (3 on each side).

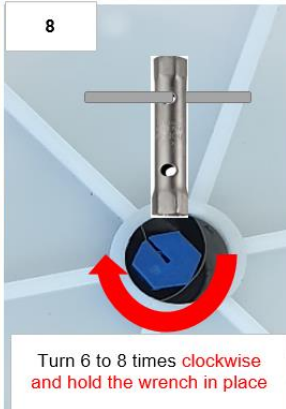

Turn 6 to 8 times clockwise and hold the wrench in place

8. Tighten the hexagonal (blue) shaft with a 13mm socket wrench 6 to 8 turns in clockwise direction, Keep during step 8 and 9 the wrench in place to keep the tension on the spring!



9. Place the transparent reel in the lower part of the black housing. Place the bottom end of the blue shaft in the socket of the black housing, this to secure and maintain the tension on the spring). Keep holding the transparent reel in place! The wrench can be removed now...



10. Place the tape thru the opening of the outer housing part and guide the last centimeters of the tape gently in the housing until the rubber sleeve in front of the (pre installed) gate handle prevents the transparent reel from further rotating.



11. Now reassemble the upper part of the outer housing. Make sure the upper part of the (blue) shaft is lined up and locked in the outer housing socket. Now tighten all 8 screws (4 at each side).