Gallagher Smart Fence

Replacing the reels (1/2)

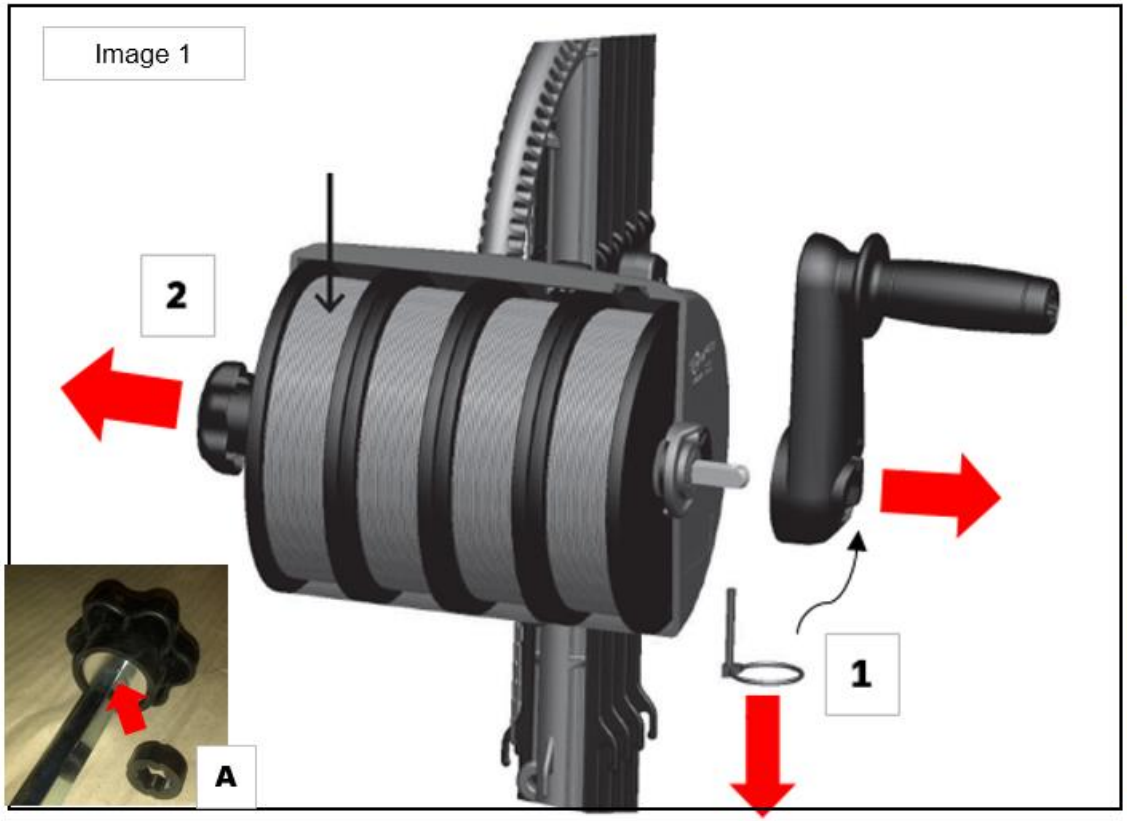

Cut all 4 (old) wires and rewind the reels until the wires are in the housing of the reel.
Pull the lynch pin from the axle (1) to release the handle and remove the handle from the axle.
Now remove the axle from the housing by pulling the tension knob (2).
Note, behind the knob there is a plastic bearing (A), keep this bearing in place so it will not be lost!

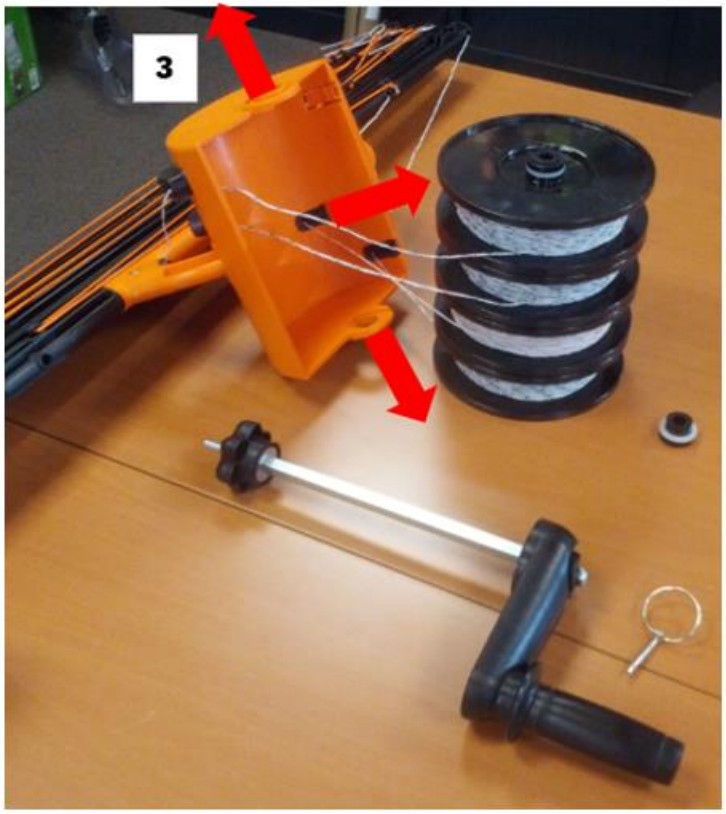

Now remove the reels out of the housing by gently stretching both sides of the housing a little apart (3).

Gallagher Smart Fence
Replacing the reels (2/2)

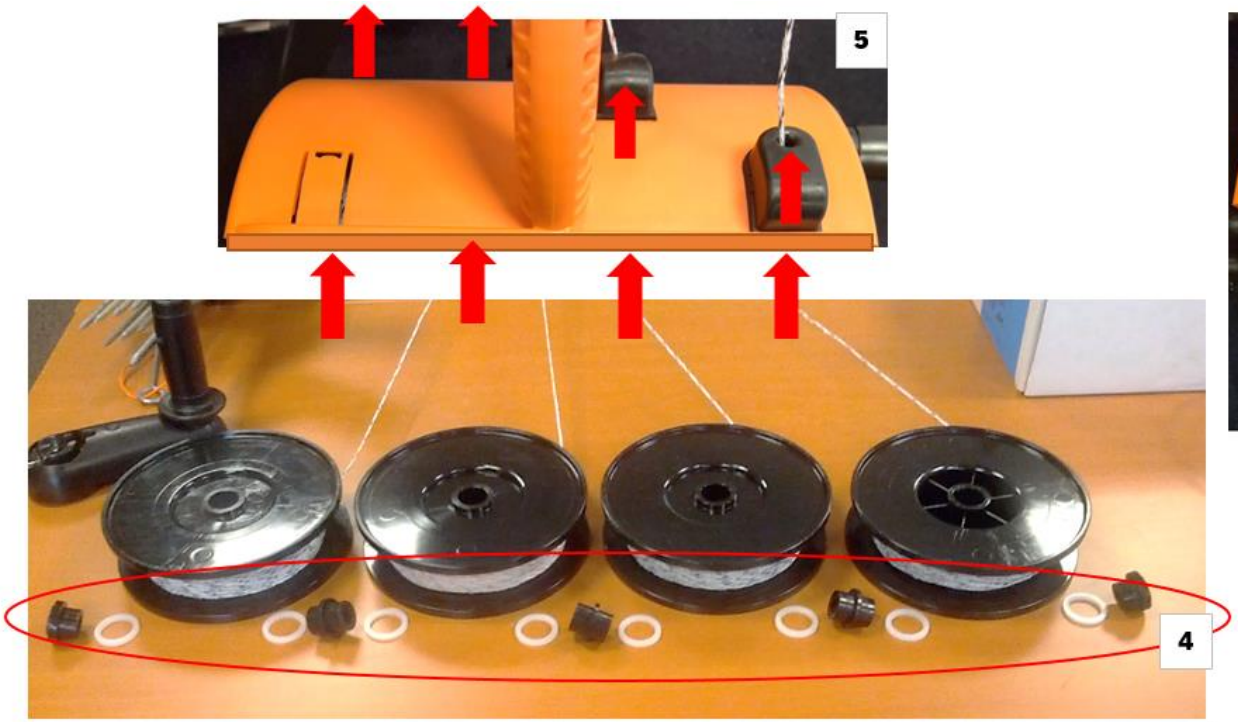

The reels now can be separated very easily from each other,
remember the locations of the bearings and rings holding the reels together (4).
Replace the reels with new ones by putting all the bearings and rings back in the same location as before.

Reccomended polywire setting:
From left to right , 2x PowerLine (black) 1x TurboLine (red), 1x PowerLine (black)

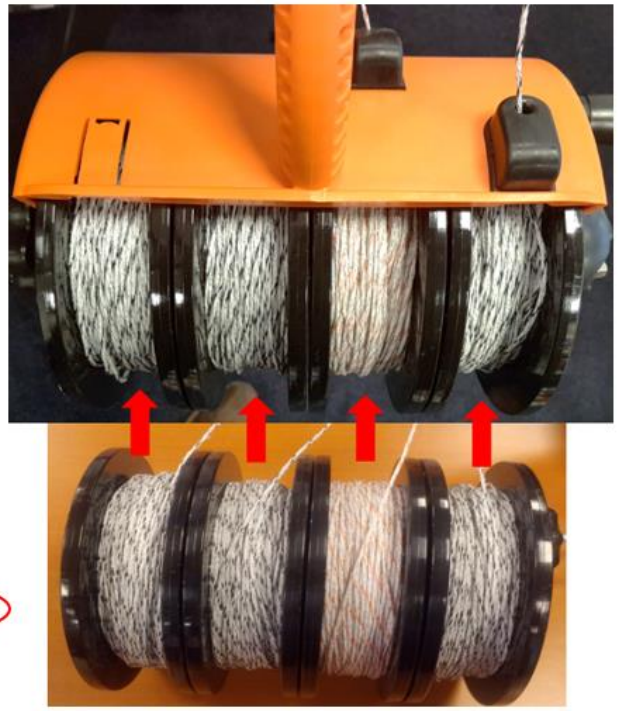

Place the reels back in the housing.

Now place the axle with the tension knob back in the housing, attach the handle and secure it with the lynch pin (Image 1 in reverse).
Install the 4 Poly wires according the manual and your SmartFence is ready for use.